





LOWERING BLOCK KIT

INSTALLATION INSTRUCTIONS

Doing one side at a time, remove u-bolts. Using a hydraulic jack, raise the axle away from the leaf springs. Place block on leaf spring. Lower axle down so the weight is on the block. Install and tighten the u-bolts to 80 lbs. Repeat this procedure on the other side of the vehicle. Cut off any excess u-bolt.

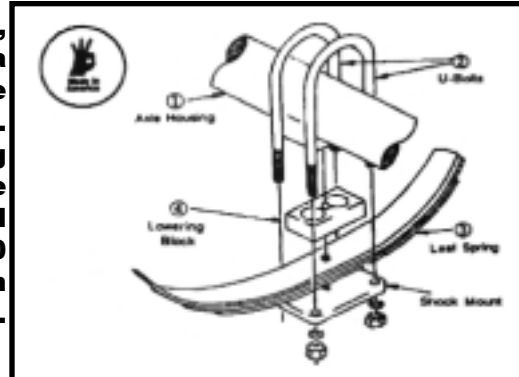

It is recommended to make a habit of retightening the u-bolts every few months.

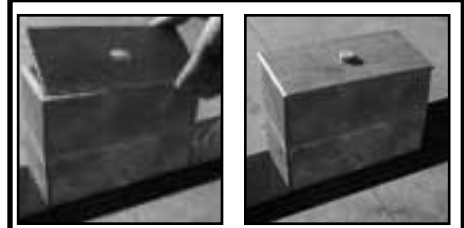

1997-2000 S10 \ Blazer
Installing lowering blocks with plates is easy. Next set plate on top of block. Complete installation as usual.

WWW.DJMSUSPENSION.COM

TECH INFO (310) 538-1583 FAX (310) 538-0393

CAUTION : USING THE KIT ON LATE MODEL S10 PICKUP AND BLAZERS WILL REQUIRE BLOCK PLATE KIT DJM PART # 1023-BP, DUE TO THE NARROW SPRING PAD ON THE AXLE HOUSING.

FAILURE TO USE BLOCK PLATES WITH THIS KIT MAY CAUSE DAMAGE TO THE BLOCKS AND WILL VOID WARRANTY.